



PLAN VIEW

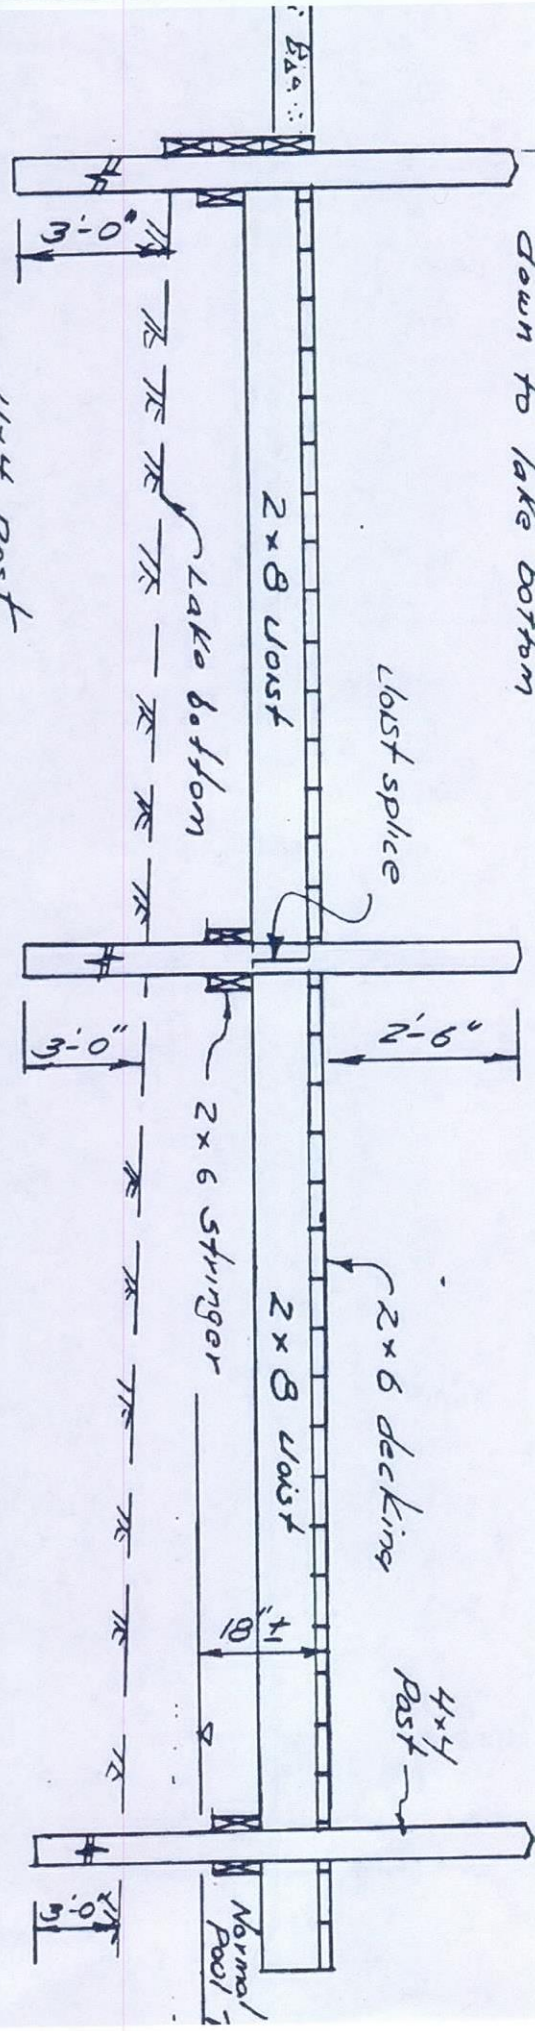

ELEVATION VIEW

NOTES

1. All lumber shall be pressure treated.
2. All stringers & joist shall be attached to post use 3/8" lag bolts.
3. Use 16p spiral galv. deck nail.

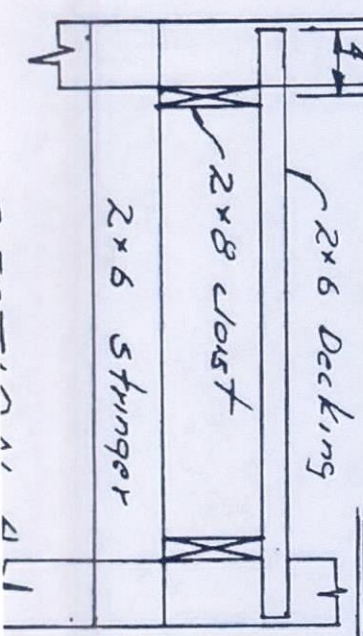

ELEVATION VIEW